# **LSV6-08-2 NORP**

2-Way,2-Position,Normally open Poppet-type Solenoid Valve

#### **DESCRIPTION**

A solenoid operated, 2-way, 2-position, normally open, poppet-type cartridge valve with reverse flow de-energized.

#### **OPERATION**

When de-energized, the poppet lifts to open flow from 2 to 1; Flow is also open from 1 to 2.

When energized ,the cartridge acts as a check valve, allowing flow from 1 to 2, while blocking flow from 2 to 1, after overcoming the solenoid force.

## **Operation of Manual Override Option**


To override, push button in to activate. To return to normal valve function, release button.

#### **SYMBOL**




## **SPECIFICATIONS**

Max.Operating Pressure	350bar
Flow	See PRESSURE DROP VS.FLOW graph.
Internal Leakage	3 drops/min max. at 350bar
Temperature	-40°F to +212°F(-40°C to +100°C)
Coil Duty Rating	Continuous from 85% to 115% of nominal voltage
Filtration	See page N-1
Fluids	Mineral-based fluids with viscosities of 7.4 to 420 cSt.
Cavity	08-2,See page M-1
Housing Material	Steel & Ductile iron rated to 350bar

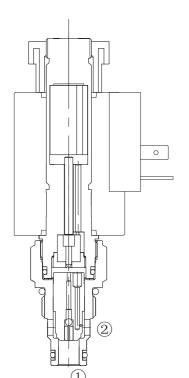

#### PRESSURE DROP VS.FLOW

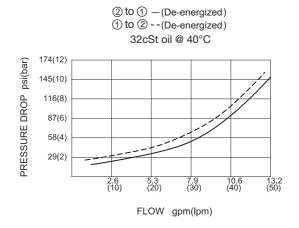



### **TO ORDER**



- 1 Function
  - LSV6=Solenoid Valve
- 2 **Size** 08=08 Size
- 3 Flow Path
- **2**=2-Way
- 4 Style
  - NOR=Normally Open, Reverse Flow De-energized
- 5 **Type** P=Poppet
- 6 Manual Override Options
  - Omit=None M=Manual Override

7 Coil Voltage

<b>1</b> =12	VDC
<b>2</b> =24	VDC
3=110 4=220	VAC VAC
7=48	VAC
<b>8</b> =24	VAC
<b>9</b> =72	VDC

- 9 Port Size
  - Omit=None 6T=SAE 6 3G=G 3/8
  - See page K-1 for detail of housing
  - **X**Other port sizes are available
- 8 Coil Connector Type
  - D= Double Lead
  - H= Hirschmann
  - B= Double Spade
  - ER= Deutsch Connector (Water-proof Coil)
  - S= Single Lead

## **INSTALLATION DIMENSIONS**

Coil Must Be Installed With Letter Up

Unit=Millimeters

